


PREPARING TO INDUCT PRODUCT:


1. Check boom tap is in the ON position.

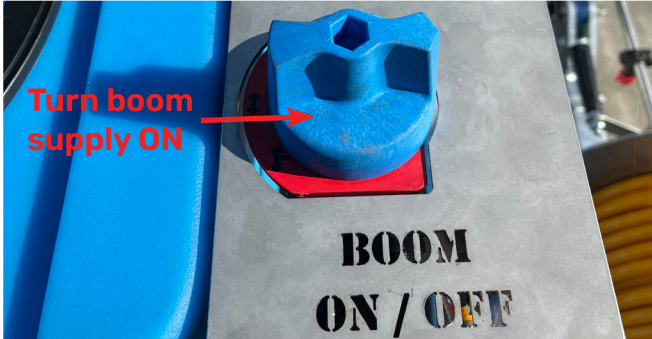


2. Fill main tank with fresh water to desired level.
3. Fill flush and handwash tank with fresh water.
4. Turn Electric control ON and turn section switches OFF
5. Turn on tractor PTO. Do NOT exceed 540 RPM. Wait for pump to run smoothly.
6. Turn off flow to boom.




7. Induction system works at 8-10Bar, adjust pressure if required using the pressure adjust switch on the electric console.
8. Turn induction system on.

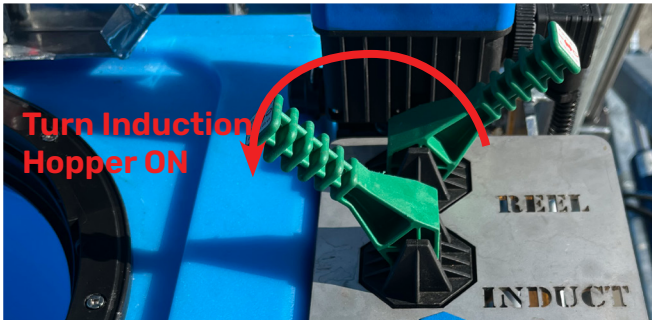

9. Add product to hopper and allow induction system to transfer into tank.
10. Carefully rinse the hopper with clean water. Use at least 2 litres and transfer rinse water into main tank.
11. Turn induction system off.

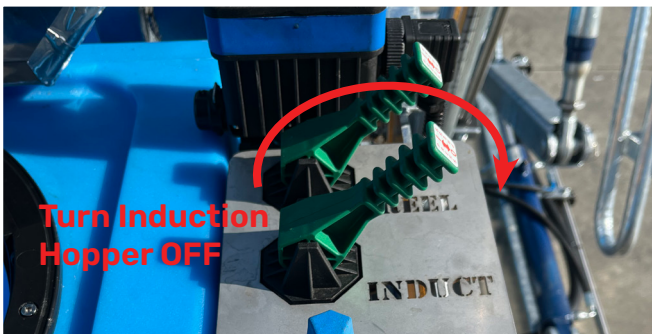

12. Turn boom tap to ON position. Adjust pressure (if required) back to spray setting.

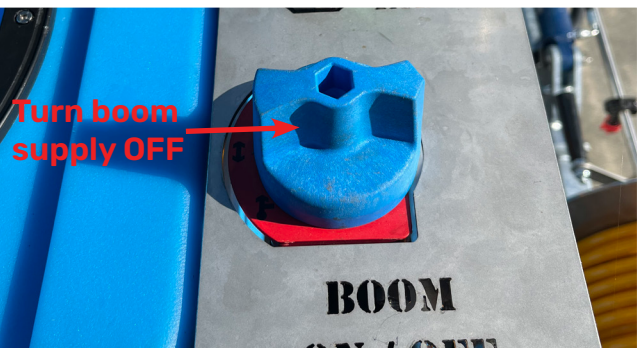

NOZZLE INFORMATION:

	PRESSURE (BAR)	CAPACITY 1 NOZZLE (L/MIN)	LITRES/HA							
			SPEED IN KM/HR							
03	1	0.68	204	163	102	81	68	58	51	45
	1.5	0.83	249	199	124	99	83	71	62	55
	2	0.96	288	230	144	115	96	82	72	64
	3	1.18	354	283	177	141	118	101	88	78
	4	1.36	408	326	204	163	136	116	102	90
	5	1.52	456	364	228	182	152	130	114	101
	6	1.67c	501	400	250	200	167	143	125	111
04	7	1.8	540	432	270	216	180	154	135	120
	1	0.91	273	218	136	109	91	78	68	60
	1.5	1.12	336	268	168	134	112	96	84	74
	2	1.29	387	309	193	154	129	110	96	86
	3	1.58	474	379	237	189	158	135	118	105
	4	1.82	546	436	273	218	182	156	136	121
	5	2.04	612	489	306	244	204	174	153	136
05	6	2.23	669	535	334	267	223	191	167	148
	7	2.41	723	578	361	289	241	206	180	160
	1	1.14	342	273	171	136	114	97	85	76
	1.5	1.39	417	333	208	166	139	119	104	92
	2	1.61	483	386	241	193	161	138	120	107
	3	1.97	591	472	295	236	197	168	147	131
	4	2.27	681	544	340	272	227	194	170	151
	5	2.54	762	609	381	304	254	217	190	169
	6	2.79	837	669	418	334	279	239	209	186
	7	3.01	903	722	451	361	301	258	225	200

SPRAYING

1. Check the chart above to determine what speed and pressure you intend operating at to achieve the desired application rate.
2. Travel to the job with the pump running to mix the tank contents. Do not exceed 540 rpm at the PTO.
3. Once in the paddock, unfold the boom using the hydraulic remotes on the tractor. Be sure that the machine is well clear of objects during this process.
4. Switch on the sprayer using the electric console.



5. Adjust the pressure to the desired setting using the electric console.



6. With the main switch left OFF , turn on the section valves.
7. Turn ON the main switch and drive at the designated speed to apply spray to the desired area.

AFTER SPRAYING

1. Switch the main control valve to Rinse position.



2. Turn on the PTO and turn on the sprayer using the electric console. Run the sprayer until the flush tank is completely drained to clean the pump, lines and boom.
3. Turn off the sprayer at the console and turn off the PTO.
4. Return main control valve to Main position.
5. Return to water fill point. Open the drain and then flush the tank using supply hose through the main fill hatch on top of the tank.



6. Clean the outside of the sprayer. Check the pump oil level. Grease the boom main pivot points.
7. Store the sprayer in a shed.

SCAN FOR PDF MANUAL & OPERATOR INSTRUCTIONS

